



SECUNORM 590

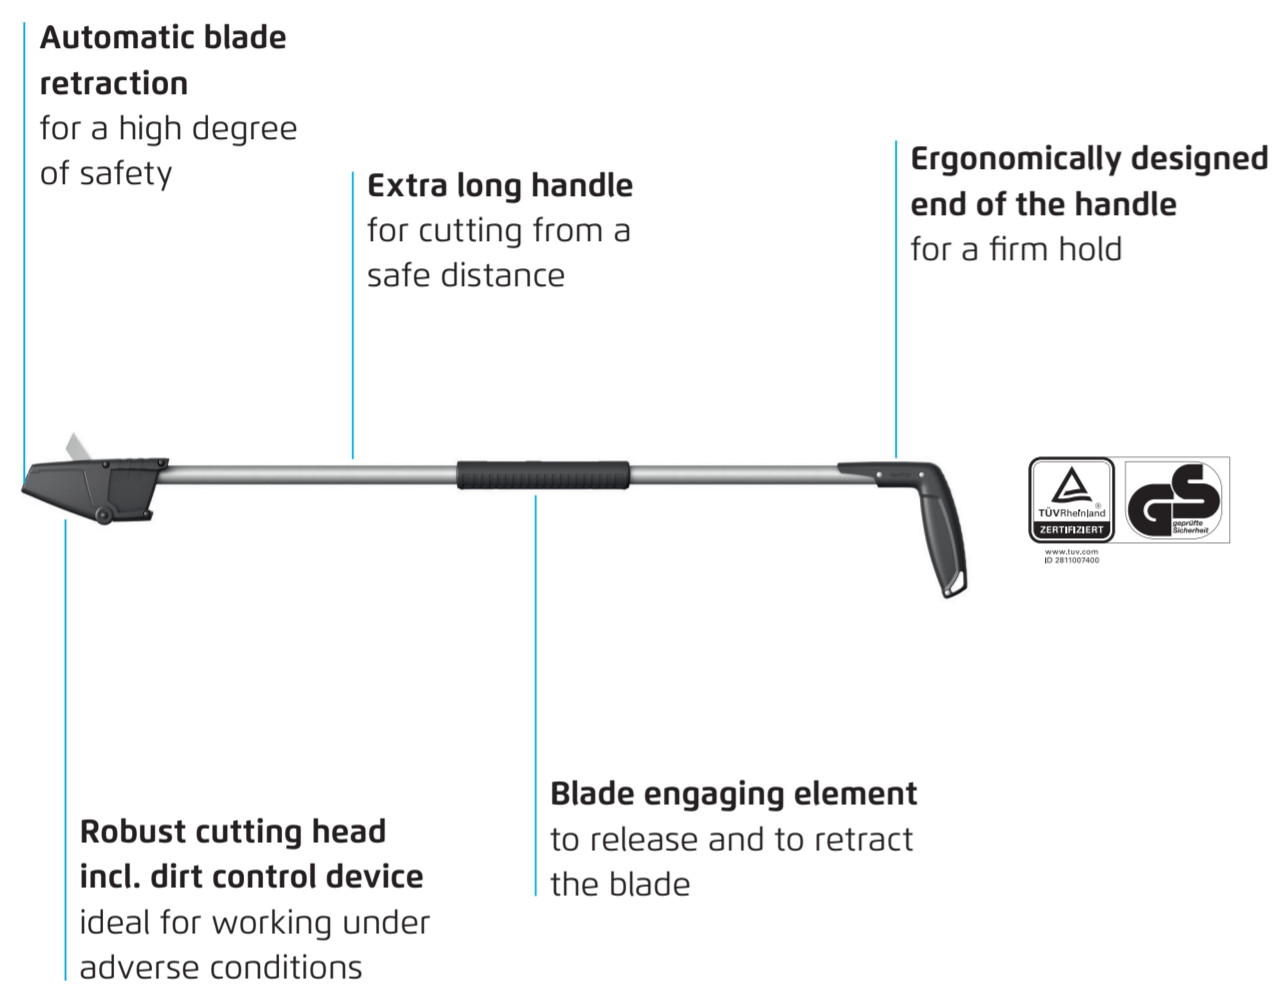


Please note: to ensure your product always functions faultlessly, remove any impurities periodically. For additional safety, we recommend to wear gloves.


USAGE

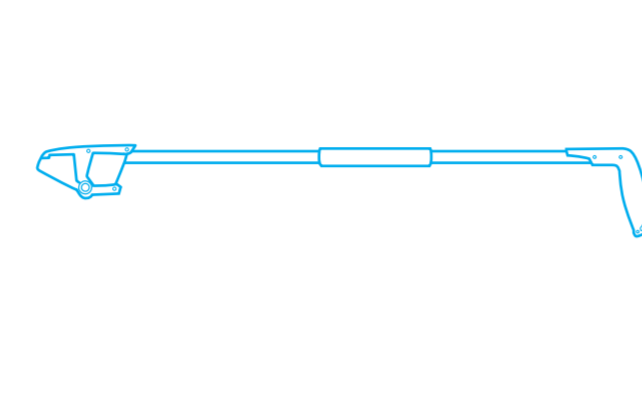


In order to use the SECUNORM 590, take it in **both hands**. Use one hand to operate the blade engaging element and use the other hand to hold the end of the handle tightly.

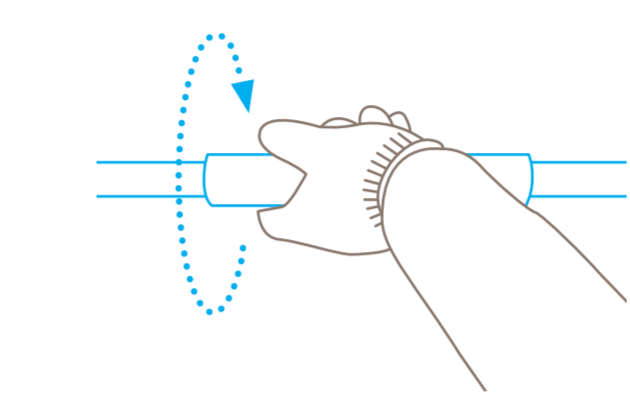

In order to release the safety catch, twist the blade engaging element in a **clockwise direction** until you feel resistance ...

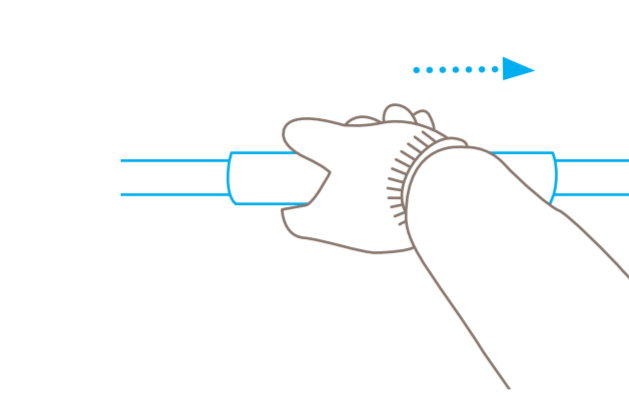


... and then **pull it backwards** until the blade releases.

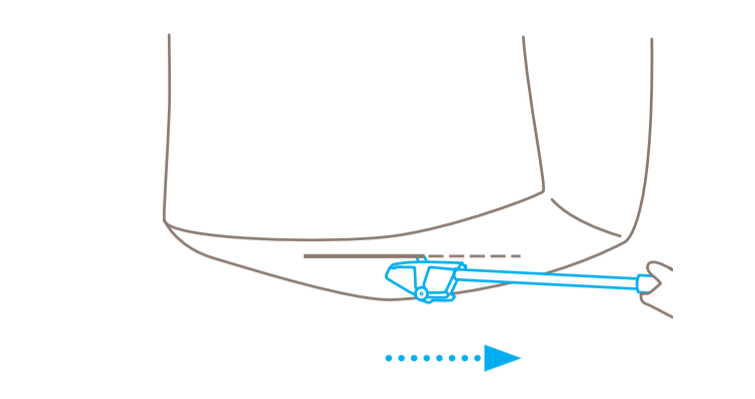


Then insert into the big bag from the bottom or introduce another cutting material and **cut towards** yourself, using tensile forces.


BLADE CHANGE

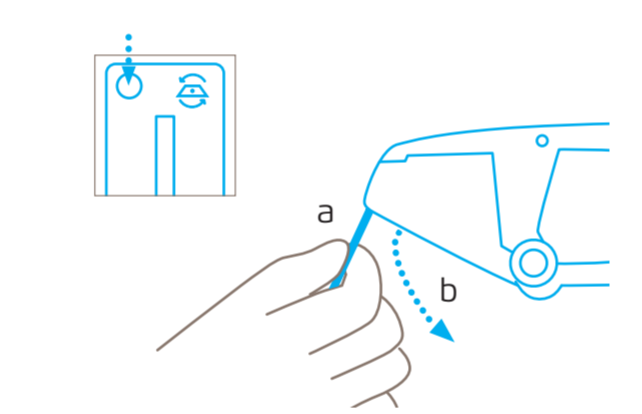


After removing the protective cap **unscrew the screw** on the blade cover (a). Then swivel the cover in a **downwards direction** and open fully (b).

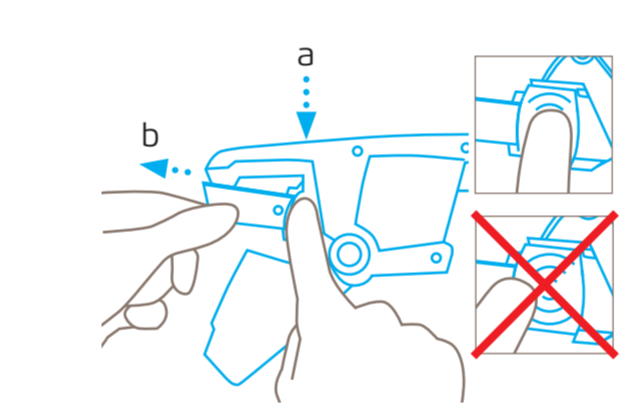

Now push the **centre** (a) of the blade holder **(within the crosshatched area)** and remove the blade with the other hand **simultaneously** (b).

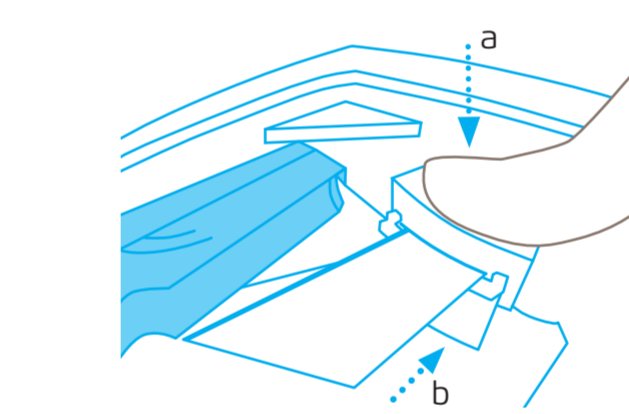


In order to insert a **new blade** press the centre of the blade holder again (a). At once push the blade into the blade holder until the **hole formation can no longer be seen** (b).

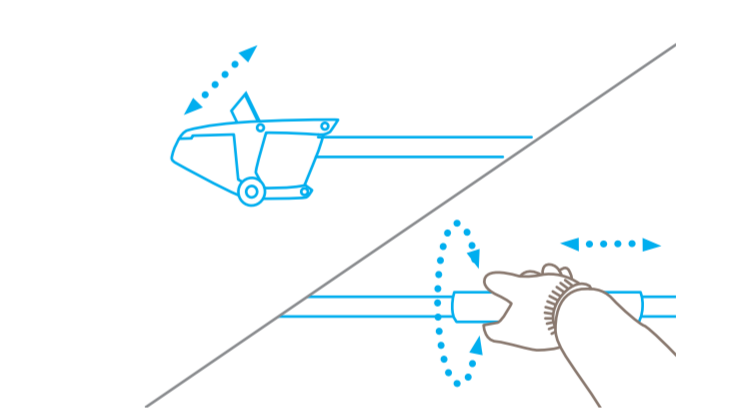


After successfully changing the blade, please check whether the **release and retraction** of the blade is functioning properly.

PROTECTION OF USER

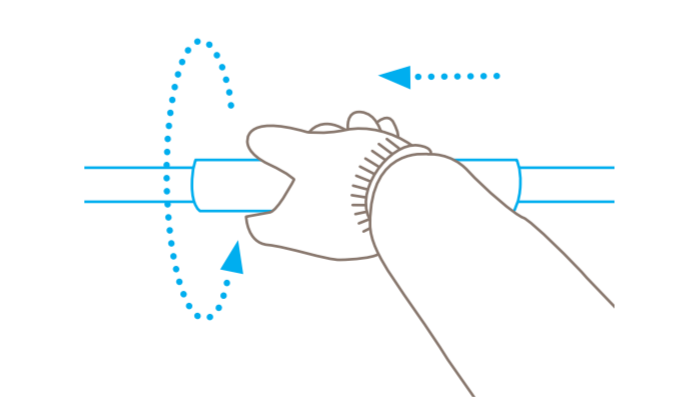


In order to ensure that the blade safely retracts back into the handle after the cutting, move the blade engaging element **back to the initial position** (automatic blade retraction).

DISPOSAL

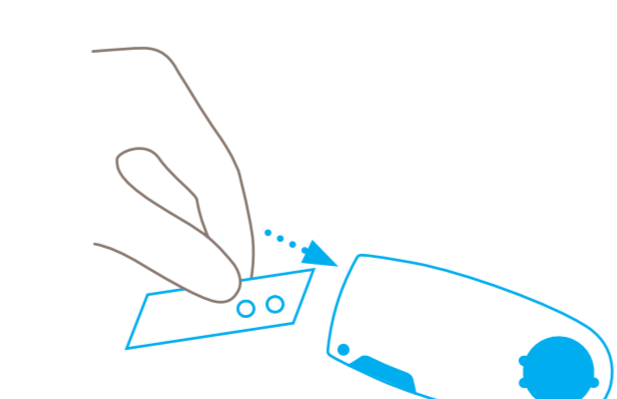

Your **SAFEBOX** is the best place to store **used blades**.

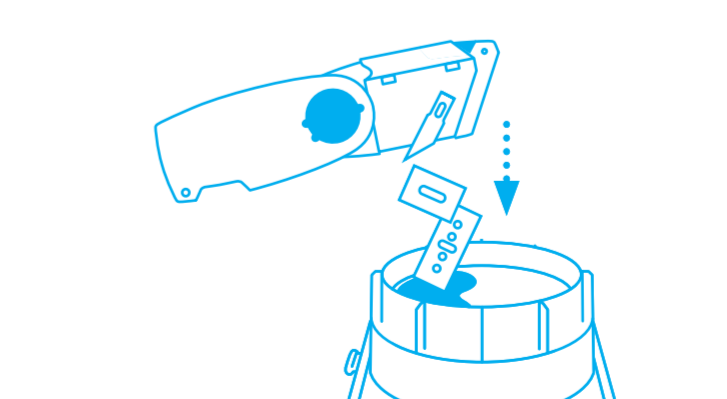

When the **SAFEBOX** is full, **empty all contents** into your **USED BLADE CONTAINER**.